

WARRANTY

- **Model : Esprit**
- **Purchasing Date :**
- **Purchasing Shop :**
- **Warranty term: 1 Year from purchasing date**

Thanks for purchasing our cases.
3R SYSTEM guarantee that all the cases are produced under perfect quality control and warrants this product under the followings.

■ Warranty Service

1. This product can be warranted for 1 year from the purchasing date.(The Restriction of Warranty)
2. If the repair needs after the warranty period, the charge of parts and the repair should be done by the purchasers.
3. The term of validity of components for finished products is 1 year and if the replacement of parts are required after that, the customers are responsibility for the charge of parts.

■ Out of Warranty

1. Warranty doesn't cover any damage caused from abuse, misusing, fault and consequential damage.
2. Any damage resulted from modifying intentionally and using for the other purpose cannot be covered.

3R SYSTEM CO.,LTD.

2F, Dongjin B/D, #1-171 Shinky-Dong, Yongsan-Ku, Seoul, Korea

Tel:82 2 702 0687-0688 Fax:82 2 704 8909

<http://www.3rsystem.co.kr>

Notice

- When users carry the heavy cases, be careful not to get hurt.
- Pay attention to the damage due to the external pressure
- Use safety gloves to free from the electric shock and hurt your fingers in assembling.
- When you installation of the storage , install after backup your data
- Try assembling or remove some device, after switch off and separation of AC cord.

Specification

- Dimension: 180 x 430 x 440 (W x H x D)
- Bays: 4 x 5.25", 8 x 3.5" (Hiddn 6)
- Front USB port
- IRDA port optional
- 1 x 80mm Fan

How to install

■ Notice to set up the MotherBoard


: Install the mainboard supporter in the exact position of screw to protect any damage of system and Motherboard due to short-circuit.

■ Switch connection (Refer the Motherboard Manual)

- ① POWER SW (Power Switch) : Marking as PW/Power/On in Mainboard.
- ② RESET SW (Reset Switch) : Marking as Reset in Mainboard.
- ③ POWER LED : Marking as PW_LED /POWER_LED in Mainboard.
In case that 2pins uses instead of normal 3 pins in Mainboard, use after cutting the middle of this connector and connect it each other.
(If it doesn't work because of polarity, install it reversely)
- ④ HDD LED (IDE LED) : Marking as IDE_LED/HD_LED in Mainboard.
(If it doesn't work because of polarity, install it reversely)
- ⑤ SPEAKER : Marking as SPK/Speaker in Mainboard.

■ Front USB connection (Refer the Motherboard Manual)

Cable	Motherboard
+5V	+5V / VCC / (USB) Power
-D	-D / USBP-
+D	+D / USBP+
GROUND	GROUND / GND

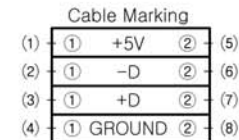

■ Examples of Installation

